

Gear position indicator




CRF1000A

The gear position is shown in the gear position indicator.

- u “—” appears when the transmission is not shifted properly.

CRF1000D

The gear position is shown in the gear position indicator when the D, S mode or MT MODE are selected.

- u “—” flashes when the engine stop switch position is changed from  (Run) to  (Off) position with the ignition switch on.
- u “—” flashes when the ignition switch is turned on with the engine stop switch  (Off) position.

The indicator may flash if:

- u The front wheel leaves the ground.
- u You turn the wheel while the motorcycle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch off, then on again.

If the “—” indicator is blinking in the gear position window while riding: (P141)