

Instruments *(Continued)*

Trip time [ELAPSED]/Air temperature gauge [AIR] display

The **3** (up) or the **4** (down) button selects between the air temperature gauge and the trip time when this display is selected.



Air temperature gauge

Shows ambient temperature.

Display range: 14 to 122°F (-10 to 50°C)

- Below 14°F (-10°C): “- -” is displayed
- Above 122°F (50°C): 122°F or 50°C flashes

The temperature read-out may be incorrect at low speeds due to reflected heat.

Trip time

Shows operating time since the engine was started.

Display range: 0:00 to 19:59 (hours:minutes)

- The trip time return to 0:00 when the read-out exceeds 19:59.