



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

**Torque:** 19 lbf-ft (26 N·m, 2.7 kgf·m).

10. Install a new sealing washer onto the drain bolts. Tighten the drain bolts.

**Torque:** 22 lbf-ft (30 N·m, 3.1 kgf·m).

11. Fill the crankcase with the recommended oil (2 P. 86) and install the oil fill cap.

#### Required oil

##### When changing oil & engine oil filter:

CRF1000A

4.3 US qt (4.1 litres)

CRF1000D

4.4 US qt (4.2 litres)

##### When changing oil only:

CRF1000A

4.1 US qt (3.9 litres)

CRF1000D

4.2 US qt (4.0 litres)

12. Check the oil level. 2 P. 104
13. Check that there are no oil leaks.
14. Install the skid plate.