


2. Make sure that the slot on the brake caliper bracket is positioned in the lug on the swingarm.

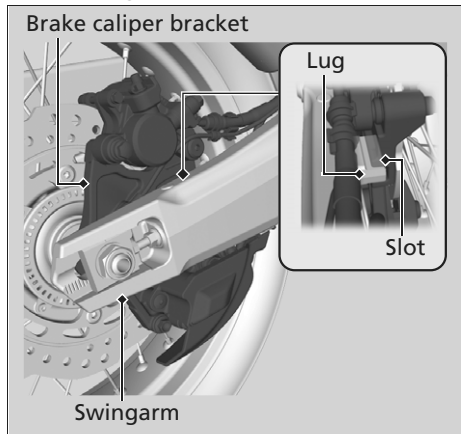

3. Adjust the drive chain. 2 P. 118
4. Install and tighten the rear axle nut.

Torque: 74 lbf·ft (100 N·m, 10.2 kgf·m).

5. After installing the wheel, apply the brake pedal several times, then recheck that the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.