









Maintenance Schedule

Items		Frequency*1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line 				I		I		I			-
	Throttle Operation 				I		I		I			139
	Air Cleaner*2					R			R			107
	Crankcase Breather*3			C	C	C	C	C	C			140
	Spark Plug	Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R										-
	Valve Clearance 						I					-
	Engine Oil		R		R		R		R		1 Year	120
	Engine Oil Filter		R				R					120
	Clutch Oil Filter*8		R				R					122
	Engine Idle Speed 				I		I		I			-
	Radiator Coolant*7				I		I		I		3 Years	124
	Cooling System 				I		I		I			-
	Secondary Air Supply System 						I					-
Evaporative Emission Control System*4 						I					-	

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 191).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace if necessary)

L : Lubricate

R : Replace

C : Clean