

Compression Damping

You can adjust the compression damping by the adjuster to suit the load or the road surface.

The compression damping adjuster has 12 positions or more.


Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). Turn the adjuster clockwise (hard) until it will no longer turn (lightly seat). Turn the adjuster counterclockwise (soft) until it clicks.

CRF1000A/D

The standard position is 8 from the maximum setting.

CRF1000A II/D II

The standard position is 4 from the maximum setting.

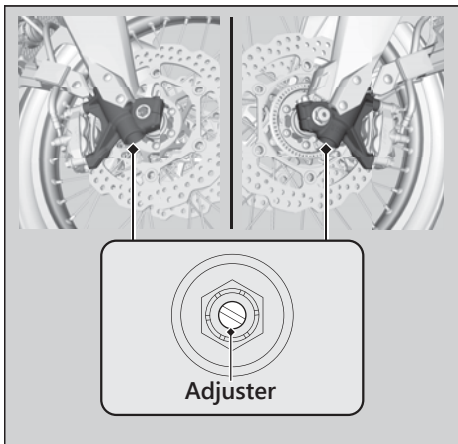

NOTICE

Do not turn the adjuster beyond its limits. Adjust both left and right forks to the same compression damping.