

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. 2 P. 70
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - u If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. 2 P. 70
- Make sure engine stop switch is in the (Run) position. 2 P. 50
- Check for a blown fuse. 2 P. 170
- Check for a loose battery connection (2 P. 108) or battery terminal corrosion (2 P. 98).
- Check the condition of the battery. 2 P. 167

If the problem continues, have your motorcycle inspected by your dealer.