


Battery Box Cover

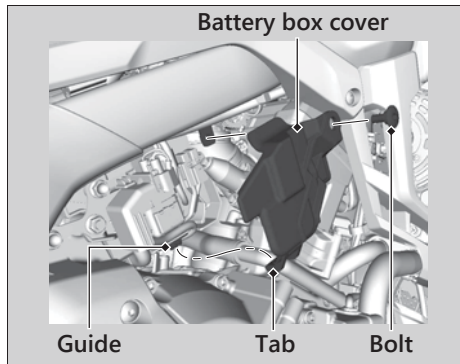

Removal

1. Remove the bolt.
2. Remove the battery box cover by releasing its tab from the guide.

Installation

Install the parts in the reverse order of removal.