

| To operate handle grip heater

- 1 Start the engine. **➡ P.70**
- 2 Press the handle grip heater switch. The handle grip heater is on.
 - ▶ The status icon will be appeared on the display when the handle grip heater operates.
- 3 Select the heater level by pressing the switch.
 - ▶ The clock on the display automatically switch to the indication of the heater level. The indication will return to the ordinary mode after blinking for about 5 seconds.
 - ▶ Do not leave the handle grip heater in the high position for a long time on a warm day.

| To turn off handle grip heater

Press or press and hold the handle grip heater switch until handle grip heater indicator turns off.
Do not use the handle grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.