


## To Select a Desired Setting Menu

To operate with the left handlebar:  
Press ▲ or ▼ to select the available choices.

To operate with the left handlebar:  
Push ◀ or ▶ to select the available choices.

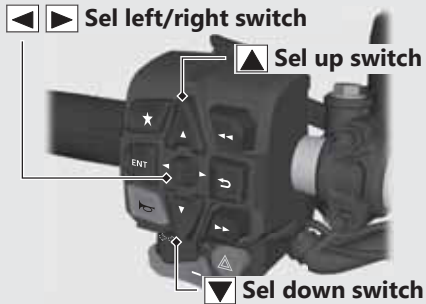

To operate with the touch screen:  
Touch the menu to be selected on the touch screen.

## To Set Your Selection

To operate with the left handlebar:  
Press the ENT switch on the left handlebar to set your selection.



To operate with the touch screen:  
Touch the menu to be selected on the touch screen.