


Battery Voltage [VOLTAGE]

Displays the current battery voltage.

 
Display range: 7.5 to 18.5 V

1	2	3	4
INST. CONS.		30.0 mpg	
AVG. CONS.		45.0 mpg	
VOLTAGE		 12.0 v	
DATE		Wed, 15, May, 2019	

When "---.-" flashes, have your dealer check for problems.

Date [DATE]

Displays today's date.

1	2	3	4
INST. CONS.		30.0 mpg	
AVG. CONS.		45.0 mpg	
VOLTAGE		 12.0 v	
DATE		Wed, 15, May, 2019	

To set the current date: 