 
 




To increase the volume: push forward the  function lever.

- u To increase the volume rapidly, push forward and hold the  function lever.


To decrease the volume: pull backward the  function lever.

- u To decrease the volume rapidly, pull backward and hold the  function lever.

Volume level range:

Other than Microphone: Level 0 to 30

Microphone: Level 0 to 14

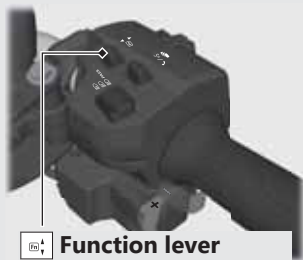

Auto Volume

Selects the volume setting to automatically increase volume from the headsets as the speed of the vehicle increases.

To select the Auto Volume:  P.92

Available settings: [Off]/[Low]/[High]

Default: [Off]