

Audio System *(Continued)*

Phone Pairing

You can establish a *Bluetooth*® connection in two ways.

- [Discoverable]: Search from the device.
- [Phone Pairing]: Search from the system.

This function is disabled while the vehicle is in motion.

- 1 Enable the *Bluetooth*® function on your device.
 - u For details, refer to the instruction manual of your device.
- 2 Select [Bluetooth], and then press the **ENT** switch.

