
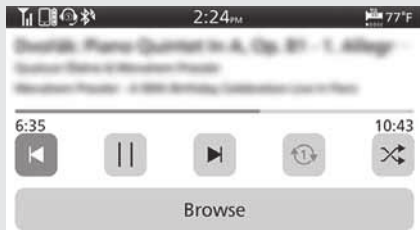


## Audio System *(Continued)*


- 3 Select , and then press the **ENT** switch.



- 4 Return to the riding information, previous screen or Home screen. **P.38**

You can also perform the above settings by using the touch screen.

### To Pause a Track

Select , and then press the **ENT** switch. You can also perform the above settings by using the touch screen.