

# Cornering Light

CRF1100A4/D4


The cornering light lights up the direction of travel of the vehicle when cornering.

## Operating conditions:

- Vehicle has been ridden at a speed of over 6 mph (10 km/h).
- When the vehicle banking left or right.

Three-step lighting state is switched by the bank angle.

## Cornering light adjusting screw location

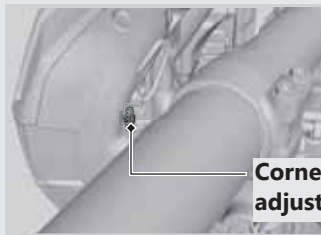

Cornering light adjusting screw



Cornering light

