



Removal

- CRF1100A/D**
Move the seat strap forward.
- Insert the ignition key into the seat lock.
- Turn the ignition key clockwise, then push the rear seat forward and up.

Installation

- Insert the tabs into the recesses.
- Push down on the front of the rear seat until it locks in place.
 - u Make sure that the seat is locked securely in position by pulling it up lightly.
- CRF1100A/D**
Move the seat strap to its original position.

The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.