

- 10. Remove the rear wheel and side collars.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - u Do not push the brake pedal while the wheel is removed.
 - u CRF1100D/D4

Do not set the parking brake while the wheel is removed.

Installation

- **1.** To install the rear wheel, reverse the removal procedure.
 - Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.