

Instruments (Continued)

G Switch [G]

CRF1100D/D4

Displays the selected status of the G switch [G].



Available settings: [ACTIVE]/[CANCEL]

Default:

- [TOUR MODE]: [CANCEL]
- [URBAN MODE]: [CANCEL]
- [GRAVEL MODE]: [CANCEL]
- [OFF ROAD MODE]: [ACTIVE]
- [USER 1 MODE]: [CANCEL]
- [USER 2 MODE]: [CANCEL]

To select the G switch [G]: **P.122**