



## Instruments (Continued)

- 1 Select [User Modes], and then press the **ENT** switch.
- 2 Select [User 1] or [User 2] using the **▲** sel up or **▼** sel down switch, and then press the **ENT** switch.

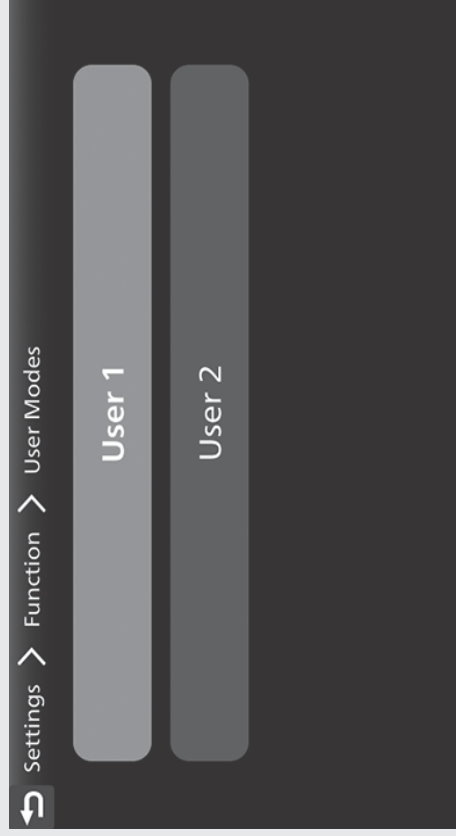

- 3 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu.
- 4 Push the **◀** or **▶** of the **◀▶** sel left/right switch until the desired value is displayed.
  - ▶ Push and hold the **◀** or **▶** of the **◀▶** sel left/right switch to advance the figure fast.

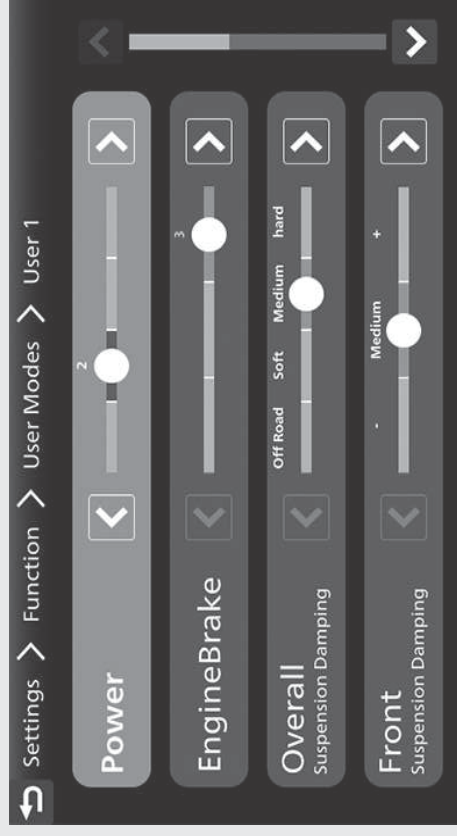

- 5 Return to the riding information, previous screen or Home screen. **▶P.38**  
You can also perform the above settings by using the touch screen.

**Available settings:** **▶P.141**

**Default:** **▶P.139**