


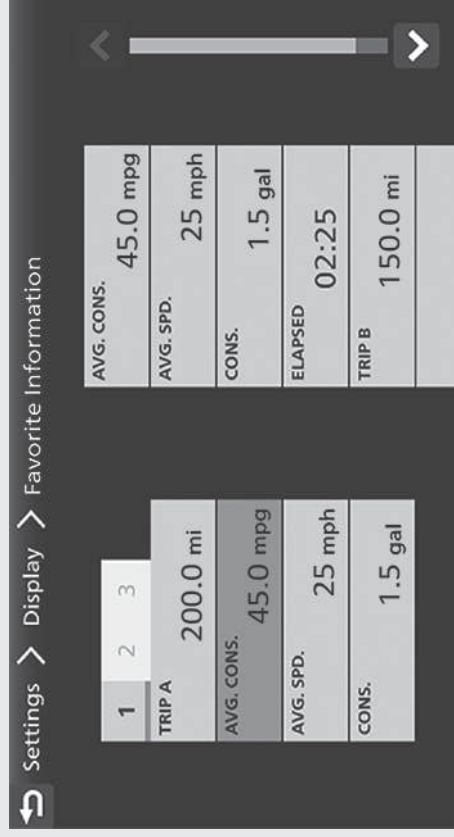

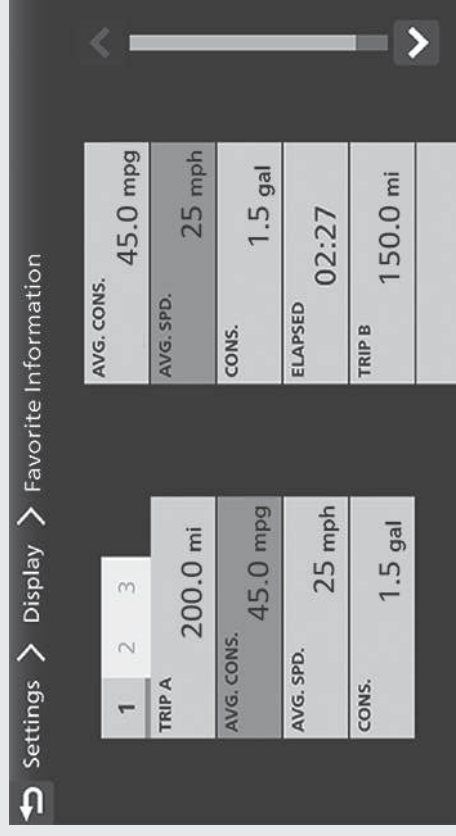


- 1 Select [Favorite Information], and then press the **ENT** switch.
- 2 Push the  or  of the   sel left/right switch until the desired page is displayed.
- 3 Press  /  to select the available choices, and then press the **ENT** switch.



- 4 Press  /  to select the available choices, and then press the **ENT** switch.



- 5 Return to the riding information, previous screen or Home screen.  You can also perform the above settings by using the touch screen.