



- 5 Press the **ENT** switch.
- 6 Select [ABS RR].
- 7 Press **◀▶** on the **▶▶** sel left/right switch to select [CANCEL] (off).

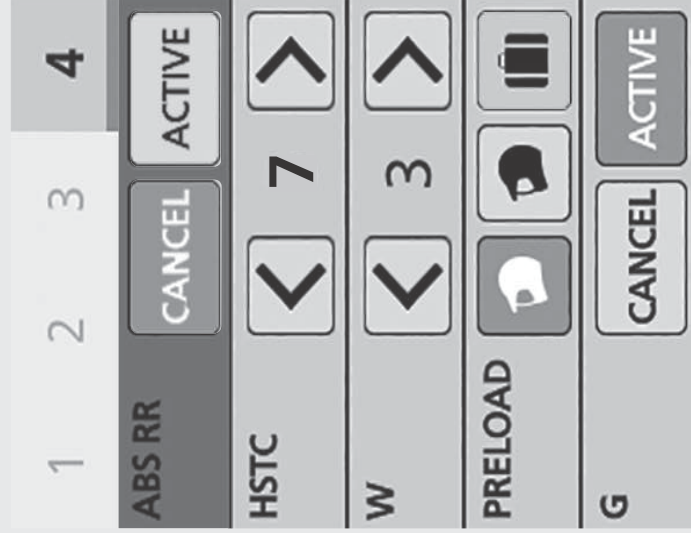

- 8 Read the notice message.
- 9 Select [Yes], and then press the **ENT** switch.

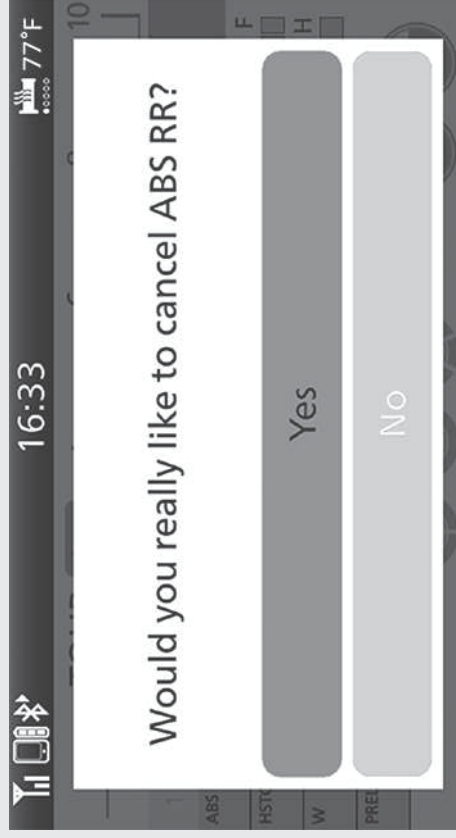

- 10 Press the **↶** back switch.
 - ▶ The rear ABS OFF indicator is on, when the ABS function on the rear wheel [ABS RR] is turned [CANCEL] (off).

You can also perform the above settings by using the touch screen.