
 
 
 
 

 
 

 


- [1]  Function lever: Push forward or pull backward the lever to adjust the volume.
 - To increase the volume: Push forward the lever.
 - To decrease the volume: Pull backward the lever.
 - To increase the volume rapidly: Push forward and hold the lever.
 - To decrease the volume rapidly: Pull backward and hold the lever.
- [2]  Sel up switch: Press the switch to select a menu item.
- [3]  Sel down switch: Press the switch to select a menu item.
- [4]  Left/Right switch: Press the switch to select a menu item.
- [5]  Skip switch:
 - To skip to the next song: Press the switch.
 - To move rapidly within a track: Press and hold the switch.

- [6]  Back switch:
 - To go back to the beginning of the current or previous song: Press the switch.
 - To move rapidly within a track: Press and hold the switch
- [7]  ENT switch: Press to set your selection.
- [8]  Voice control switch:
 - To receive or end a call. Starts Siri if Apple CarPlay is available: Push forward the switch.
 - To reject a call: Push forward and hold the switch.
- [9]  Page switch:
 - To return to the riding information or audio screen: Pull backward the switch.
 - To return to the home screen or Apple CarPlay screen: Pull backward and hold the switch.
- [10]  Back switch:
 - To return to the previous screen: Press the switch.
 - To return to the audio screen: Press and hold the switch.