

Audio System (Continued)

Phone Pairing

You can establish a Bluetooth® connection in two ways.

- [Discoverable]: Search from the device.
- [Phone Pairing]: Search from the system.

This function is disabled while the vehicle is in motion.

1 Enable the *Bluetooth*® function on your device.

► For details, refer to the instruction manual of your device.

2 Select [Bluetooth], and then press the **ENT** switch.

