








Maintenance Schedule

Items	Frequency*1											Regular Replace	Refer to page			
	x 1,000 mi	0.6	4	8	12	16	20	24	24							
	x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	38.4							
Fuel Line				I		I				I						
Throttle Operation				I		I				I						276
Air Cleaner*2								R								
Crankcase Breather*3			C	C	C	C	C	C	C	C	C	C	C	C	C	
Spark Plug		Every 16,000 mi (25,600 km): I		I	Every 32,000 mi (51,200 km): R											
Valve Clearance						I										
Engine Oil				R		R				R					1 Year	
Engine Oil Filter				R		R										
Clutch Oil Filter*8				R		R				R						
Engine Idle Speed				I		I				I						
Radiator Coolant*7				I		I				I					3 Years	262
Cooling System				I		I				I						
Secondary Air Supply System																
Evaporative Emission Control System*4																
Exhaust Gas Control Actuator Cable																

Emission-Related Items

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➡ P. 338).

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)
L : Lubricate
R : Replace
C : Clean