

Maintenance Fundamentals

Check the following items at regular intervals:

- Oil level is between the upper and lower level marks. ➔ P. 260
- Brake fluid level is
Front: above the LOWER level mark.
➔ P. 264
Rear: between the UPPER and LOWER level marks. ➔ P. 264
- Engine coolant level is between the UPPER and LOWER level marks. ➔ P. 262
- Side stand functions properly. ➔ P. 268
- **CRF1100D/D4**
Parking brake works properly. ➔ P. 266

Before riding off-road check all of the preceding plus the following:

- Make sure spokes are tight. Check the rims for any damage. ➔ P. 271
- Oil level is between the upper and lower marks. ➔ P. 260
- Check the fuel level and refuel when needed. ➔ P. 13, ➔ P. 216
- Be sure the fuel fill cap is securely fastened. ➔ P. 216
- **CRF1100A/A4**
Clutch lever operates smoothly. Adjust freeplay if necessary. ➔ P. 273
- Check for loose cables and other parts, and anything that appears abnormal.
- Use a wrench to check the tightness of all accessible nuts, bolts and fasteners.