


Front Seat

Removal

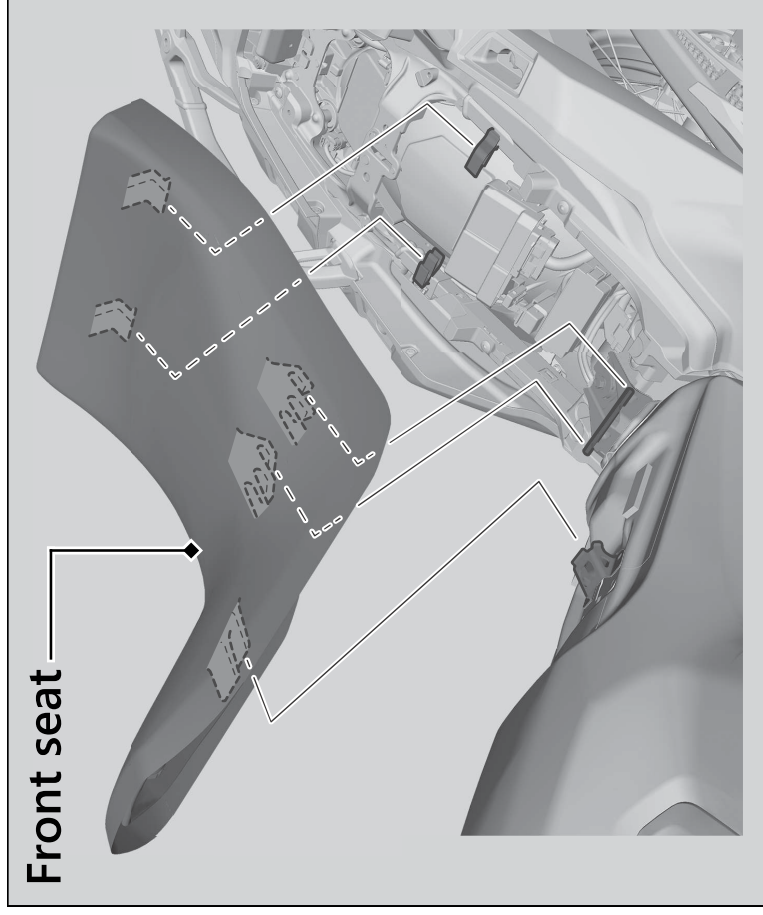

1. Remove the rear seat. ➔ P. 253
2. Remove the front seat while pulling it backward and upward.

Installation

1. **When setting the high seat position:**

Insert the front lower prong and center lower prongs into the front stay and center stays on the fuel tank, and insert the rear hooks into the upper slots.

- When setting the low seat position:**

Insert the front upper prong and center upper prongs into the front stay and center stays on the fuel tank, and insert the rear hooks into the lower slots.