

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 237

■ Fuse Box Fuses & ABS FSR Fuse

1. Remove the front seat. ► P. 251
2. Open the fuse box covers.
3. Pull the fuses out with the fuse puller provided on the underside of the rear seat (► P. 222) one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the front seat.

