

# Starting & Stopping the Engine

Always follow the proper starting procedure described below.

## Preparation

Before starting, insert the key and turn the ignition switch ON.

Make sure that the transmission is in neutral and the engine stop switch is at RUN (○). Turn the fuel valve ON.


## Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

### Normal Air Temperature

10°–35°C (50°–95°F)

LEFT SIDE

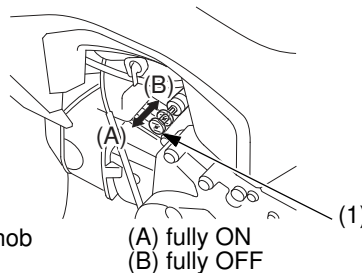

(1) choke knob

(A) fully ON  
(B) fully OFF

1. Pull the choke knob (1) out all the way to fully ON (A).