

Ignition Switch


The ignition switch (1) is used to prevent unauthorized use of the motorcycle.

Before riding, insert the key and turn it to the right for the I (ON) position.

Key Position	Function	Key Removal
○ (OFF)	The engine cannot be operated.	The key can be removed.
I (ON)	With the engine stop switch at ○ (RUN) and the transmission in neutral, the engine can be started.	The key cannot be removed.

After parking the motorcycle, remove the key.

FRONT

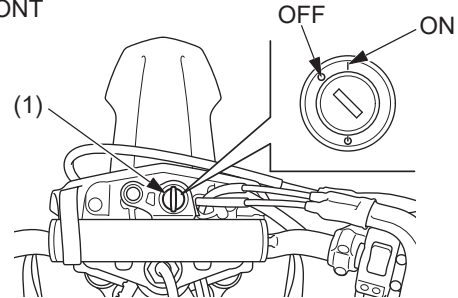

(1) ignition switch

