

Operating Controls

Start Button





The start button is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 31.

When the start button is pushed, the starter motor will crank the engine.

Engine Stop Switch



The engine stop switch can be used to turn the engine off in an emergency. To operate, turn the switch to the  (STOP) position. The switch must be in the  (RUN) position to start the engine.

Front Brake Lever

The front brake lever is used to slow or stop your motorcycle. To operate, pull the lever. For information on braking techniques, see page 36.

Throttle

The throttle controls engine rpm (speed). To increase engine rpm, rotate the grip toward you. To reduce engine rpm, rotate the grip away from you. The throttle will automatically return to the closed position (engine idle) when you remove your hand.