


Crankcase Breather

Refer to *Safety Precautions* on page 45.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle. If the drain tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.

LEFT SIDE

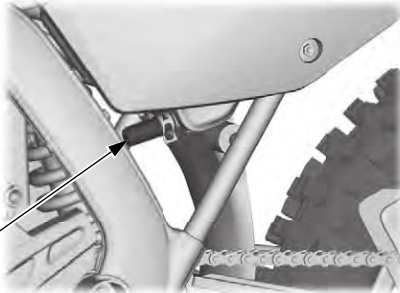

(1) crankcase breather tube

1. Place a suitable container under the crankcase breather tube.
2. Remove the crankcase breather tube (1).
3. Drain deposits into a suitable container.
4. Install the crankcase breather tube.