


# Clutch System

Refer to *Safety Precautions* on page 45.

## Clutch Freeplay

LEFT SIDE

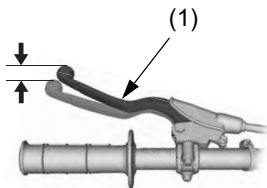

(1) clutch lever

### Inspection

Check freeplay.

Freeplay: 3/8–13/16 in (10–20 mm)


If necessary, adjust to the specified range.  
Improper freeplay adjustment can cause premature clutch wear.

### Minor Adjustment

Minor adjustments are generally made with the minor clutch cable adjuster.

*Minor clutch assembly adjuster:*

LEFT SIDE

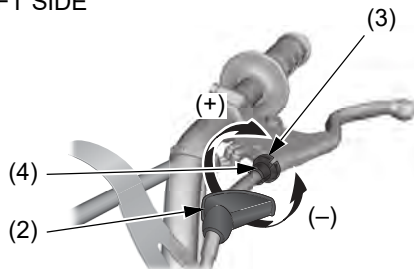

(2) rubber dust cover

(3) minor lock nut

(4) minor clutch cable  
adjuster

(+) increase freeplay

(-) decrease freeplay

1. Pull the rubber dust cover (2) back.
2. Loosen the minor lock nut (3).
3. Turn the minor clutch cable adjuster (4) to obtain the specified freeplay.