- 3. After refueling, turn the fuel fill cap clockwise until it is secure.
- 4. Check that the breather tube is properly seated in the front number plate.

If you replace the fuel fill cap, use only a Honda Genuine replacement part.