


Clutch System

Clutch Adjuster (on clutch housing)

Major adjustments can be made with the clutch adjuster on the clutch housing.

RIGHT SIDE

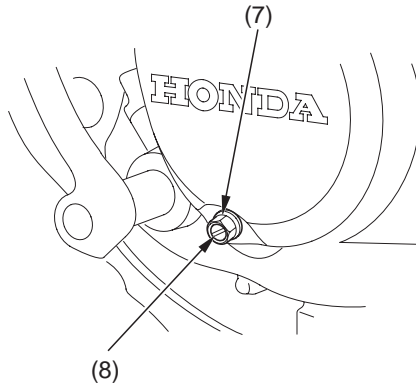

(7) clutch lock nut
(8) clutch adjuster

1. Loosen the upper lock nut (3) and turn the upper clutch cable adjuster (4) all the way in (to provide maximum freeplay).
2. Loosen the clutch lock nut (7) and turn the clutch adjuster (8) counterclockwise until a slight resistance is felt.
3. Turn the clutch adjuster back in clockwise 1/8 to 1/4 turn and tighten the clutch lock nut.
4. Readjust the lower cable adjuster for proper freeplay, using the lower lock nut (6) and lower adjusting nut (5).
5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

(cont'd)