


## Exhaust Pipe Removal


1. Remove the muffler (page 85).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and old gasket (3).

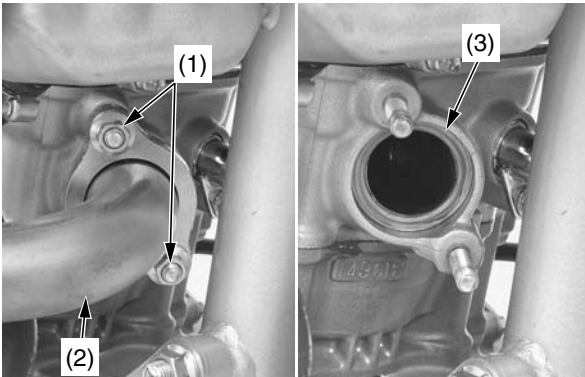

- (1) exhaust pipe joint nuts  
(2) exhaust pipe  
(3) gasket (old)

## Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3)

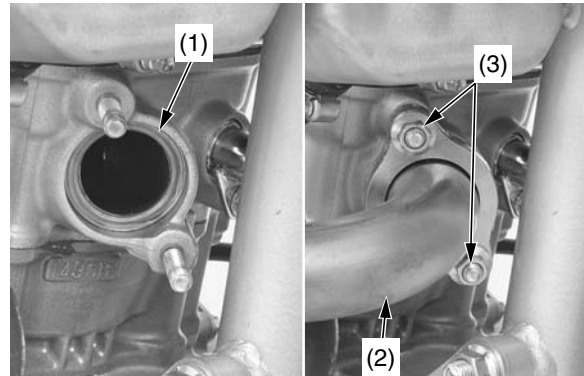

- (1) exhaust pipe gasket (new)  
(2) exhaust pipe  
(3) exhaust pipe joint nuts

3. Install the muffler (page 86) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:  
**8 lbf·ft (11 N·m, 1.1 kgf·m)**
5. Tighten the muffler clamp bolt and muffler mounting bolts (page 86).
6. Installation can be done in the reverse order of removal.