


Exhaust Pipe Removal


1. Remove the muffler ([page 85](#)).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and old gasket (3).

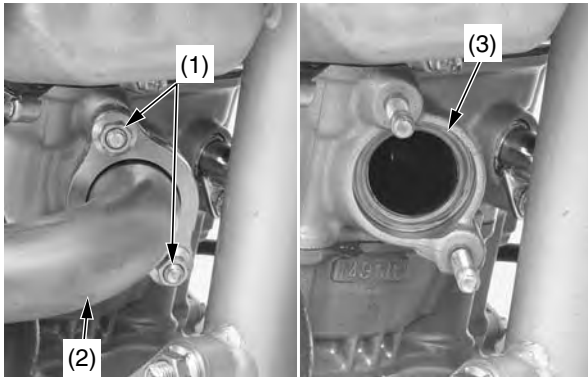

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket (old)

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3)

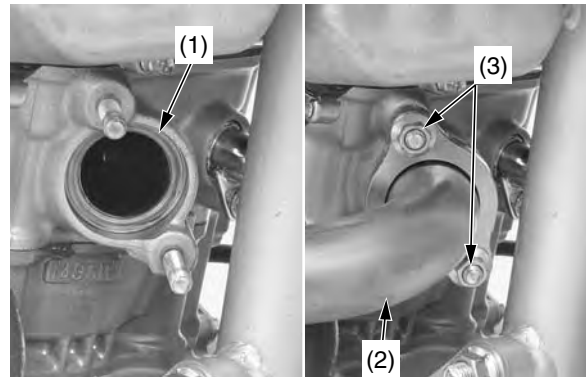

- (1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the muffler ([page 86](#)) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
8 lbf-ft (11 N·m, 1.1 kgf·m)
5. Tighten the muffler clamp bolt and muffler mounting bolts ([page 86](#)).
6. Installation can be done in the reverse order of removal.