

Tire Replacement

The tires that came on your CRF were designed to provide a good combination of handling, braking, durability, and comfort across a broad range of riding conditions.

WARNING

Installing improper tires on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

- Use a replacement tire equivalent to the original.
- Replace the tube any time you replace a tire. The old tube will probably be stretched and, if installed in a new tire, could fail.

CRF150R

| | | | |
|-----------|----|------------------|-------|
| Front | AC | 70/100 – 17 40M | |
| | | DUNLOP | MX71F |
| Front | CM | 70/100 – 17 40M | |
| | | BRIDGESTONE | M23 |
| Rear | AC | 90/100 – 14 49M | |
| | | DUNLOP | MX71 |
| Rear | CM | 90/100 – 14 49M | |
| | | BRIDGESTONE | M22 |
| Tire type | | bias – ply, tube | |

CRF150RB

| | | | |
|-----------|----|------------------|-------|
| Front | AC | 70/100 – 19 42M | |
| | | DUNLOP | MX71F |
| Front | CM | 70/100 – 19 42M | |
| | | BRIDGESTONE | M61 |
| Rear | AC | 90/100 – 16 52M | |
| | | DUNLOP | MX71 |
| Rear | CM | 90/100 – 16 52M | |
| | | BRIDGESTONE | M58 |
| Tire type | | bias – ply, tube | |