

Index

A

- accessories 3
- adjustments,
 - altitude and temperature 117
 - carburetor 110
 - chassis..... 123
 - control freeplay 46, 49, 51
 - engine idle speed 48
 - for competition 93
 - gearing 124
 - personal fit..... 126
 - suspension, front..... 94
 - suspension, rear 102
 - suspension, track conditions..... 106
 - tire selection 125
- after competition maintenance 26
- air cleaner 43
- air pressure,
 - front suspension..... 94
 - tires 80
- appearance care 90
- authorized manuals 148

B

- basic operation..... 11
- before riding 7
- between motos & practice maintenance 26
- brakes,
 - fluid level..... 76
 - lever, front adjustment..... 75
 - pad wear 78
 - pedal height 75
- break-in guidelines 16

C

- capacity, fuel 34
- carburetor,
 - adjustment 110
 - circuit functions 112
 - components 110
 - disassembly/assembly 114
 - idle speed 48
 - minor adjustments..... 120
 - optional muffler settings 118
- care, appearance 90
- chain drive..... 82
- chassis adjustments 123
- choke knob 13
- cleaner, air 43
- cleaning, appearance care 90
- clutch system, adjustment 49
- competition logbook 141
- consumer information 147
- contacting Honda 149
- controls, operating..... 5
- coolant 41
- customer service..... 149
- cylinder system 62

D

- damping adjustments,
 - front..... 100
 - rear 103
- dealer, your Honda..... 150
- diagram, wiring 146
- drive chain..... 82

E

- engine,
 - flooded..... 13
 - idle speed..... 48
 - number..... 134
 - oil..... 36
 - pinging..... 34
 - starting 13
 - stop button 14
 - stopping 14
 - won't start..... 13
- environment, protecting 130

F

- filter,
 - air..... 43
 - oil..... 37
- flooded engine, starting 13
- fork,
 - front suspension adjustment 94
 - front suspension inspection 70
 - oil recommendation 72
- front brake lever adjustment..... 75
- front suspension maintenance..... 70
- fuel,
 - line 34
 - filter 35
 - recommendation 34
 - refueling..... 34
 - system..... 34
 - oxygenated..... 140
 - tank capacity 34
 - valve 13