

# Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval					Refer to page:
			mi	600	1,200	1,800	2,400		
			km	1,000	2,000	3,000	4,000		
			Note	Month	1	6	12	18	
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months					98
	Drive Chain Slider			I	I	I	I	99	
	Brake Fluid	Note 2		I	I	I	I	83	
	Brake Pads Wear			I	I	I	I	85	
	Brake System		I	I	I	I	I	82	
	Clutch System		I	I	I	I	I	72	
	Side Stand				I		I	97	
*	Suspension				I		I	79	
*	Spark Arrester		C: every 1,000 mi (1,600 km) or every 100 operating hours					77	
*	Nuts, Bolts, Fasteners		I		I		I	–	
**	Wheels/Tires		I	I	I	I	I	87, 93	
**	Steering Head Bearings		I		I		I	–	

\* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 158).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.