

Preparation for Storage

1. Change the engine oil (page 61).
2. Fill the fuel tank. Make sure the fuel fill cap is properly installed.

(cont'd)