

## Taking Care of the Unexpected

---


### *Sub Fuse Access:*

8. Remove the fuse case (8) from the rib (9) of the battery box.
9. Open the fuse case cover and pull the sub fuse out. If the fuse is blown (10), replace it with a spare fuse (11).
10. Install the left side cover.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### **NOTICE**

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

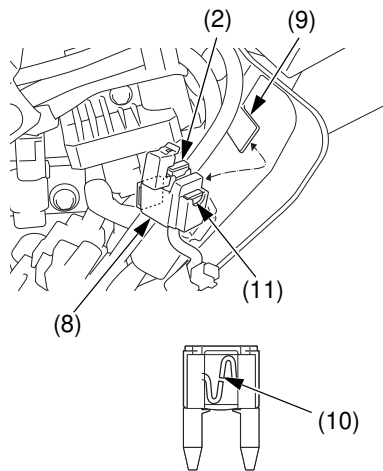

(2) sub fuse  
(8) fuse case  
(9) rib

(10) blown fuse  
(11) spare fuse