

# Maintenance Schedule

Items		Frequency	Whichever Comes First ⇒	Regular Maint. Interval				Refer to page:	
				Initial Maint.	600	1,200	1,800		2,400
				mi	100	2,000	3,000		4,000
				km	150	1,000	2,000		4,000
		Note	Month	1	6	12	18	24	
*	Fuel Line					I		I	–
**	Fuel Filter			R: every 4,800 mi (8,000 km)				–	
*	Throttle Operation					I		I	69
	Air Cleaner	Note 1			C	C	C	C	64
	Crankcase Breather				I	I	I	I	68
	Spark Plug				I	I	I	I	75
*	Valve Clearance			I	I	I	I	I	–
	Engine Oil			R	R	R	R	R	57
	Engine Oil Filter			R	R	R	R	R	–
**	Engine Idle Speed			I	I	I	I	I	–

\* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 158).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.