


# Crankcase Breather

---

Refer to *Safety Precautions* on page 39.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle, or after the motorcycle is washed or overturned.

LEFT SIDE

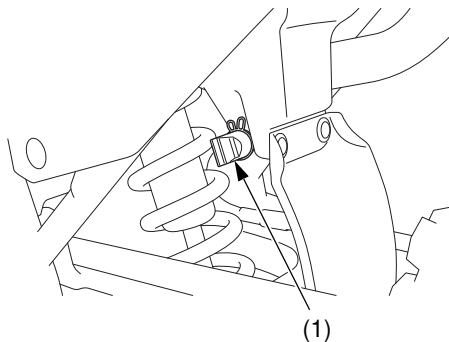

(1) crankcase breather tube

If the drain tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.

1. Place a suitable container under the crankcase breather tube.
2. Drain the deposits into a suitable container by pinching the crankcase breather tube (1).