


High coolant temperature indicator

Comes on briefly when the ignition switch is turned to the **I** (On) position.

If it comes on while running: P.92

REV indicator P.40

High beam indicator

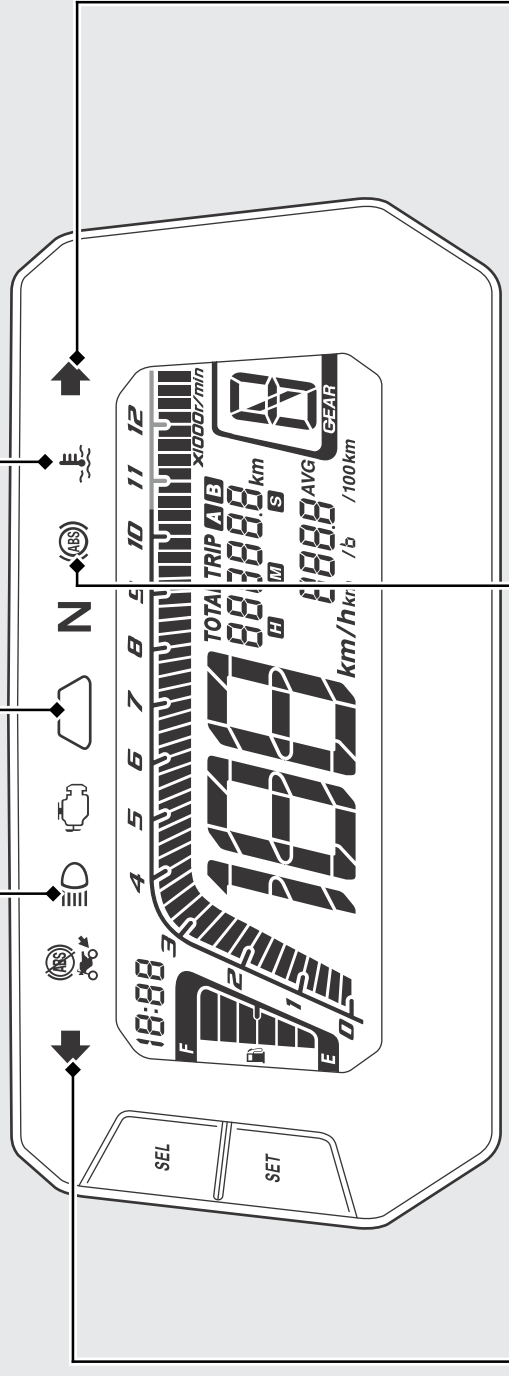

ABS (Anti-lock Brake System) indicator

MA type

Comes on when the ignition switch is turned to the **I** (On) position. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding: P.94