

ABS function on the rear wheel

MA type

The ABS function on the rear wheel can be optionally turned off for off-road riding.

- ▶ Each time the ignition switch is turned to the **I** (On) position, the ABS function on both wheels will automatically be turned on.

To turn off the ABS function on the rear wheel


- 1 Stop the vehicle.
 - 2 Press and hold the rear ABS switch until the rear ABS OFF indicator starts flashing, then release the switch while the indicator is flashing.
- ▶ The rear ABS OFF indicator is on, when the ABS function on the rear wheel is turned off.
 - ▶ The ABS function on the rear wheel remains on, if the switch is released after indicator stops flashing.

To turn on the ABS function on both wheels

- 1 Stop the vehicle.
- 2 Press and hold the rear ABS switch until the rear ABS OFF indicator is turned off, or turn the ignition switch to the **O** (Off) position and the **I** (On) position.



ABS function on both wheels is on. **ABS function on rear wheel is off.**

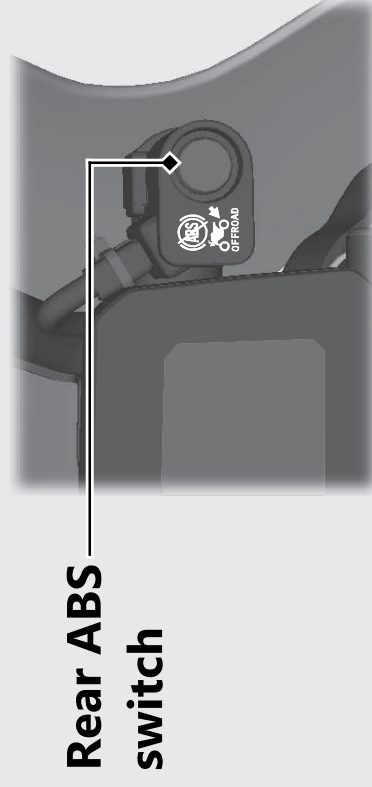

Rear ABS switch