


## Left Side Cover

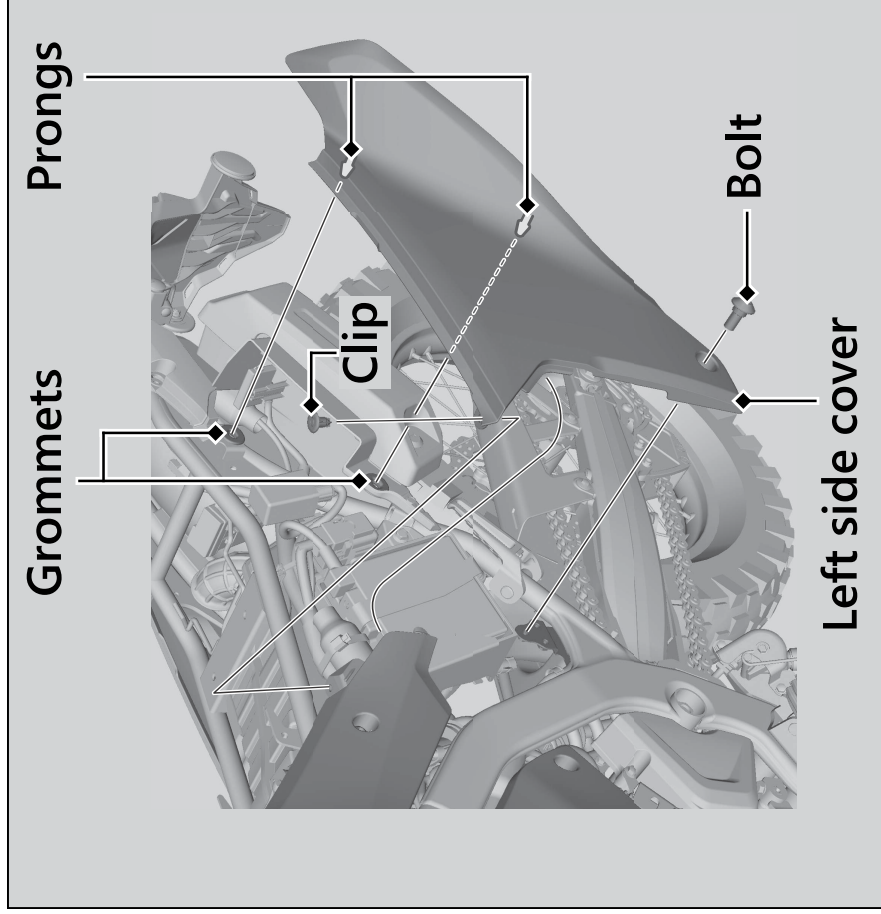

### ■ Removal

1. Remove the seat. ➔ P. 72
2. Remove the clip. ➔ P. 71
3. Remove the bolt.
4. Remove the prongs from the grommets.
5. Remove the left side cover.

### ■ Installation

Install the parts in the reverse order of removal.