


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 46
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 46
- Make sure engine stop switch is in the  (Run) position. ➔ P. 43
- Check for a blown fuse. ➔ P. 99
- Check for a loose battery connection (➔ P. 70) or battery terminal corrosion (➔ P. 60).
- Check the condition of the battery. ➔ P. 97

If the problem continues, have your vehicle inspected by your dealer.