

## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 62

### ■ Fuse Box A

1. Remove the seat. ► P. 72
2. Open the fuse box cover.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Install the seat.

