


■ Main Fuse

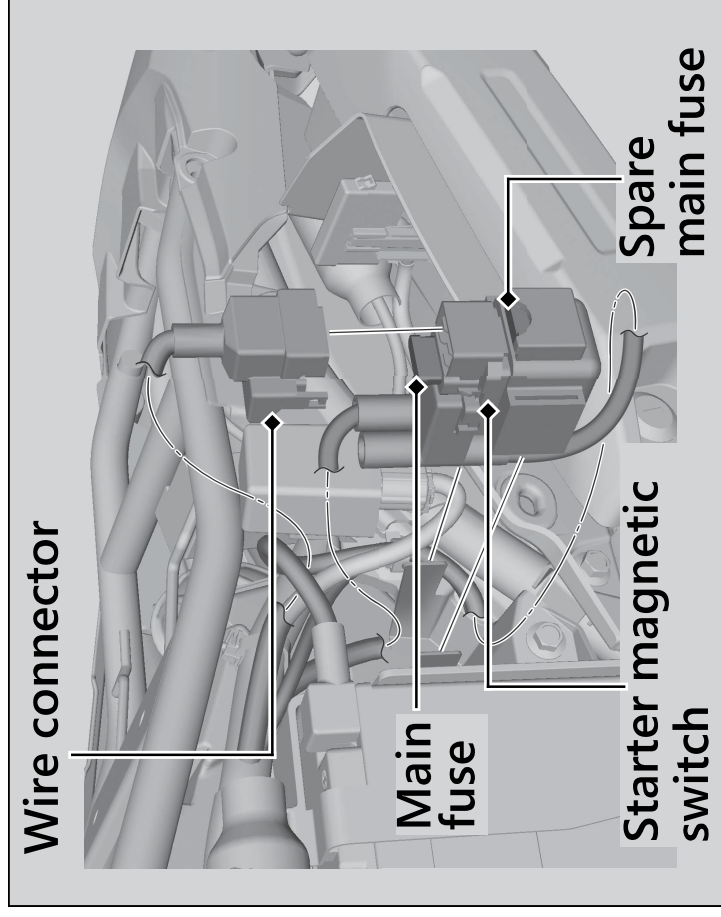

1. Remove the left side cover. ► P. 74
2. Pull the starter magnetic switch out.
3. Disconnect the wire connector of the starter magnetic switch.
4. Pull the main fuse out and check for a blown fuse.
Always replace a blown fuse with a spare of the same rating.
► Spare main fuse is provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.