


Exhaust Pipe/Muffler

Exhaust Pipe/Muffler Inspection

Check the mounting bolts and exhaust pipe joint nuts for tightness.
Check the exhaust pipe and mufflers for cracks or deformation.
A damaged exhaust pipe and mufflers may reduce engine performance.


Muffler Removal

1. Remove the seat ([page 33](#)).
2. Remove the side covers (1) and air cleaner housing covers (2) by removing the bolts (3).

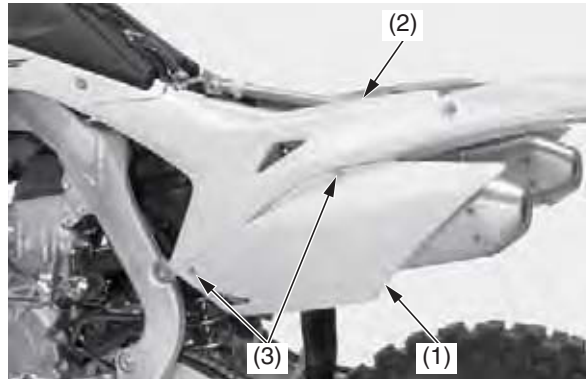


- (1) side covers
(2) air cleaner housing covers
(3) bolts

3. Loosen the left muffler clamp bolt (4).

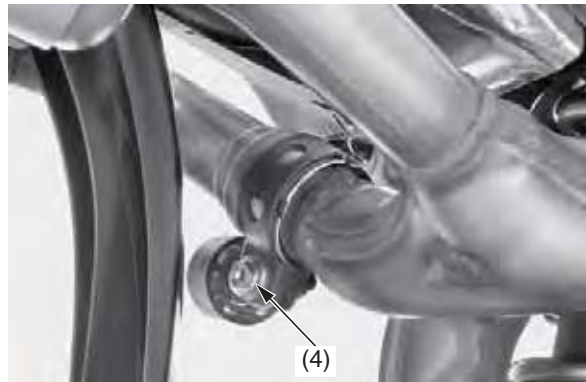

- (4) left muffler clamp bolt

4. Remove the left muffler mounting bolt (5), washer (6) and left muffler (7).

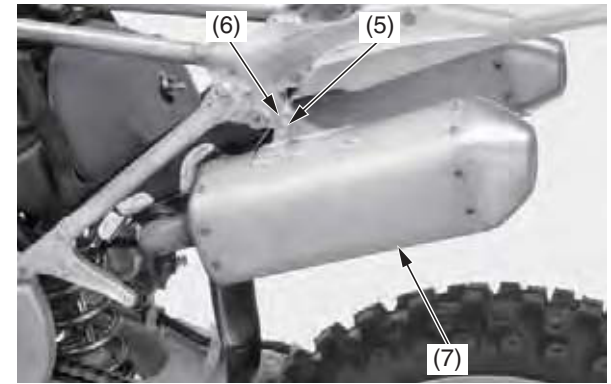

- (5) left muffler mounting bolt
(6) washer
(7) left muffler